



EXCHANGE
ARMY & AIR FORCE EXCHANGE SERVICE

Roller Grill Flavor ID Easel Instructions

KIT INCLUDES:

(34/36) Flavor IDs
2 each of 17 flavors;
OCONUS, one extra flavor



(4) 2-Sided "Still Cooking" Flags



(4) 2-Sided Position Tags



(4) Clips for "Still Cooking" Flags



(4) Half-Size Promo Insert



(1) Full-Size Promo Insert




(1) Easel with Channels




INSTRUCTIONS:

1 Place easel in front of grill.

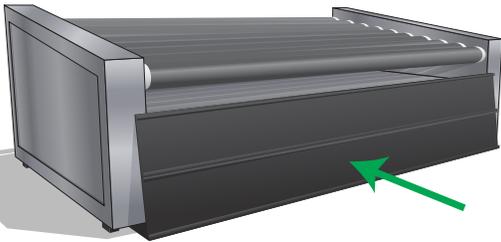


2 Slide appropriate flavor IDs into channel.

Keep in mind that the top channel is the back of grill, and the bottom channel is the front. There will be a gap in the center.

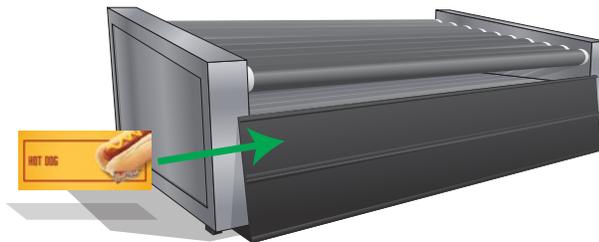

3 Add promotional insert in front of flavor IDs.

Full insert slides into very top edge of channel and very bottom edge of channel; rests over the central channels and will overlap the edges of the flavor IDs a small amount. Half inserts slide into channels as normal, but will overlap the edges of the flavor IDs a small amount.

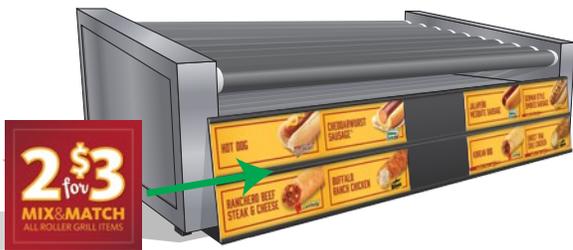

4 Add Position Tags behind Flavor IDs.

Slide "Back of Grill/Front of Grill" tags into left and right side of easel, behind the Flavor ID inserts. Prongs slide into channels, much like the Flavor ID inserts. The tag are double-sided and will work for either end.



5 Add grill divider kit to grill (not included; see divider kit instructions for assembly information) to use the "Still Cooking" flags and clips. Clips attach to divider kit by slipping the single, larger slot onto the bar going from the front to the back of the grill. Position these as necessary. Double-sided "Still Cooking" flags slide into either slot at top of clip; point the arrow into the necessary row for product that is not yet ready to consume.



Completed Easel Setup (with Full Promo Insert)

Your product selection and flag position may vary from that shown.



A NOTE ON CLEANING: The "Still Cooking" Flag Clips **must** be cleaned daily, with the same food-safe sanitizer that you would use to clean your tongs each day.